

## EQUIPMENT SHIPPED

- FoxBox Rack;
- Wall power supply;
- USB cable;
- GSM antennae.

**Note:** all the components have been tested before the shipment.

## OPERATIONAL REQUIREMENTS

- Electricity source (100 – 240 VAC);
- FoxBox LX800, GT or similar;
- Working SIM card(s), able to send and receive SMS.

**Note:** please check that you are installing the device in a place with enough GSM coverage. You can do it using a common mobile phone.

## COMPONENTS INSTALLATION

**Note:** before starting the installation, please check that the SIM doesn't have a PIN code. In case there is, please remove it using a common mobile phone.

- 01.** Screw all the antennas.
- 02.** Insert SIM cards, paying attention to the correct verse.
- 03.** Connect FoxBox Rack to your FoxBox LX800 using the USB cable.
- 04.** Plug in the electric power supply.
- 05.** Turn on FoxBox Rack and all SIM cards related switch.
- 06.** Turn on your FoxBox device.



This picture show the correct SIM cards insertion verse.

You can find all the **updates**, the **plugins**, the **widgets** and the **bug-fixes** visiting: [www.smsfoxbox.it](http://www.smsfoxbox.it)